


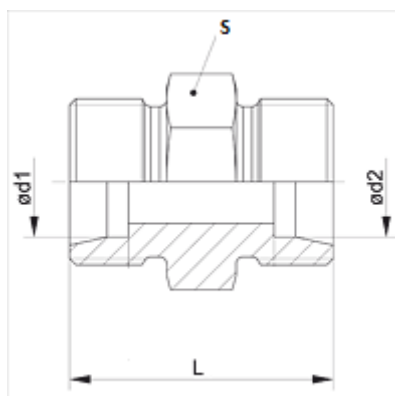

Řada	Tlak [MPa]	Označení	Průměr trubky		L	S
			d1	d2		
LL	10	SP 4LL	4	4	20	9
		SP 6LL	6	6	20	11
		SP 8LL	8	8	23	12
L	40	SP 6L	6	6	24	12
		SP 8L	8	8	25	14
		SP 8L/6L	8	6	25	14
		SP 10L	10	10	27	17
		SP 10L/6L	10	6	26	17
		SP 10L/8L	10	8	26	17
		SP 12L	12	12	28	19
		SP 12L/6L	12	6	26	19
		SP 12L/8L	12	8	26	19
		SP 12L/10L	12	10	27	19
		SP 12S/10L	12	10	33	22
		SP 12L/12S	12	12	33	22
		SP 15L	15	15	30	24
		SP 15L/8L	15	8	28	24
		SP 15L/10L	15	10	29	24
		SP 15L/12L	15	12	29	24
		SP 15L/12S	15	12	30	24
		SP 18L	18	18	31	27
		SP 18L /10L	18	10	30	27
		SP 18L / 12L	18	12	30	27
		SP 18L /15L	18	15	31	27
	25	SP 18M27x2	18	18	31	30
	40	SP 18M27x1,5	18	18	35	30
	25	SP 22L	22	22	35	32

	25	SP 22L /12L	22	12	32	32
	25	SP 22L/15L	22	15	33	32
	25	SP 22L/16S	22	16S	35	32
	25	SP 22L/18L	22	17	33	32
	25	SP 28L	28	28	36	41
	25	SP 28L/18L	28	18	34	41
	25	SP 28L/22L	28	22	36	41
	40	SP 16M22x1,5/12L	16	12	30	24
		SP 18M27x1,5/12L	18	12	32	30
		SP 18M27x1,5/16L	18	16	34	30
		SP 18M27x2/12L	18	12	30	30
		SP 18M27x2/15L	18	15	31	30
		SP 18M27x1,5/16S	18	16	35	30
		SP 18M27x1,5/18M26x1,5	18	18	33	30
		SP 18M27x1,5/18M27x2	18	18	33	30
L	25	SP 22L/18M27x2	22	18	33	32
		SP 22M30x1,5/22M30x2	22	22	33	32
	40	SP 4M10x1	4	4	20	11
		SP 5M10x1	5	5	20	11
		SP 16M22x1,5	16	16	32	24
		SP 18M27x1,5	18	18	35	30
	25	SP 22M30x1,5	22	22	42	32
		SP 28M39x1,5	28	28	48	41
		SP 36M45x1,5	36	36	52	46
S	63	SP 6S	6	6	30	14
		SP 8S	8	8	32	17
		SP 10S	10	10	32	19
		SP 12S	12	12	34	22
	40	SP 14S	14	14	38	24
		SP 16S	16	16	38	27
		SP 16S/10L	16	10	35	27
		SP 16S/10S	16	10	36	27
		SP 16S/12L	16	12	35	27
		SP 16S/12S	16	12	36	27
		SP 16S/14S	16	14	38	27
		SP 16S/15L	16	15	38	27
		SP 20S	20	20	44	32
		SP 25S	25	25	50	41

	25	SP 30S	30	30	54	46
		SP 38S	38	38	61	55