



Řada	Tlak [MPa]	Průměr trubky	Označení matky	Rozměry				Označení kroužku
				M	L	d	S	
LL	10	4	M - 04LL	M8x1	11	4	10	PR - 04LL
LL		5	M - 05LL	M10x1	11,5	5	12	PR - 05LL
LL		6	M - 06LL	M10x1	11,5	6	12	PR - 06LL

LL		8	M - 08LL	M12x1	12	8	14	PR - 08LL
L	40	6	M - 06L	M12x1,5	14,5	6	14	PR - 06L
L		8	M - 08L	M14x1,5	14,5	8	17	PR - 08L
L		10	M - 10L	M16x1,5	15,5	10	19	PR - 10L
L		12	M - 12L	M18x1,5	15,5	12	22	PR - 12L
L		15	M - 15L	M22x1,5	17	15	27	PR - 15L
L		18	M - 18L	M26x1,5	18	18	32	PR - 18L
L		22	M - 22L	M30x2	20	22	36	PR - 22L
L		28	M - 28L	M36x2	21	28	41	PR - 28L
L		35	M - 35L	M45x2	24	35	50	PR - 35L

L		42	M - 42L	M52x2	24	42	60	PR - 42L
S	80	6	M - 6S	M14x1,5	16,5	6	17	PR - 6S
S		8	M - 8S	M16x1,5	16.5	8	19	PR - 8S
S		10	M - 10S	M18x1,5	17,5	10	22	PR - 10S
S	63	12	M - 12S	M20x1,5	17,5	12	24	PR - 12S
S		14	M - 14S	M22x1,5	20,5	14	27	PR - 14S
S		16	M - 16S	M24x1,5	20,5	16	30	PR - 16S
S	40	20	M - 20S	M30x2	24	20	36	PR - 20S
S		25	M - 25S	M36x2	27	25	46	PR - 25S
S		30	M - 30S	M42x2	29	30	50	PR - 30S

S		38	M - 38S	M52x2	32,5	38	60	PR - 38S
L1	40	4	M - 04L1	M10x1	11	4	12	PR - 04L
L1		5	M - 05L1	M10x1	11,5	5	12	PR - 05L
L1		16	M - 16L1	M22x1,5	18	16	27	PR - 16L
L1	25	18	M - 18L27/1,5	M27x1,5	20	18	32	PR - 18L
L1		18	M - 18L27/2	M27x2	18	18	32	PR - 18L
L1		22	M - 22L30/1,5	M30x1,5	20	22	36	PR - 22L
L1		28	M - 28L39/1,5	M39x1,5	22	28	46	PR - 28L